



## InnoviFast<sup>TM</sup> AP Termination Bar

**Stock #:** 6300014

**Single Lip:** 0.075 in. (1.9 mm) thick

**Dimensions:** 0.216 in. (5.5 mm) lip x 1 in (26 mm) wide x 10 ft. (3 m) length

**Fastener Holes:**  
0.280 in. (7.1 mm) x 0.380 in. (9.6 mm)

**Slot Spacing:** 6 in. (152.4 mm) on center

**Material:** 6063-T6 extruded aluminum

**Pail Weight:** 51 lbs. (23.1 kg)

**Quantity/Pail:** 500 ft. (50\* 10-ft pieces)

All reported values are nominal.

- For use at parapet walls and penetrations.
- Extruded aluminum is lightweight and strong.
- Corrosion resistant.

### System Compatibility

InnoviFast AP Termination Bar is intended for use with IKO InnoviTPO Roofing Systems and is approved for use with an appropriate IKO Diamond Shield Limited Warranty. Building owners, specifiers, roof consultants and roofing contractors are invited to review the IKO InnoviTPO System Specifications at [www.iko.com/comm](http://www.iko.com/comm) for further information on including this product as part of a complete IKO roofing system.

### Extruded Aluminum Provides Increased Protection Against Corrosion

InnoviFast AP Termination Bars are manufactured with extruded aluminum, a lightweight, strong and resilient material. The material is exceptionally resistant to corrosion.

### Excellent Choice for Terminations at Parapet Wall and Other Penetrations

InnoviFast AP Termination Bars are pre-punched so that speed of installation is increased. The flat back helps supply pressure evenly to the IKO InnoviTPO membrane, while the single-lip design provides an easy reservoir for sealant.



## InnoviFast<sup>TM</sup> AP Termination Bar

### Installation

1. Substrates must be free from dust, dirt, oil, water and other contaminants. Wall areas above InnoviFast AP Termination Bar must be waterproof. Install with an appropriate IKO fastener, and per IKO details and technical requirements.
2. Install a continuous bead of InnoviSeal<sup>TM</sup> Water Stop Mastic behind top of flashing.
3. Anchor bar through pre-punched holes to maintain constant compression (max. 12 inches [304.8 mm] o.c.).
4. Install flat side of bar towards flashing so a reservoir is formed along the top edge for IKO sealant.
5. Keep each 10-foot (3 m) length of InnoviFast AP Termination Bar separated from adjoining bar by a 1/4-inch (6.3 mm).
6. Install termination bar vertically where base flashing(s) end.
7. Remove excess flashing material showing above the bottom of sealant reservoir channel.
8. Install InnoviSeal Universal Sealer into reservoir channel. When installing InnoviFast Termination Bar at a vertical orientation (for elevation changes, working around wall obstructions, etc.), install a continuous bead of InnoviSeal Universal Sealer around all sides of the InnoviFast AP Termination Bar.
9. Precautions: Do not use as a batten strip. Where field cutting is necessary, remove any burrs from bar ends. Clean up shavings, etc., that may occur from field cutting. Termination bars must be installed directly to the wall surface, not to existing sheet metal, flashings, etc. Install termination bar on hard, smooth surfaces only. Do not install on substrates where seal is lost at mortar joints, etc. Do not install termination bar to wood or other porous surfaces.

The information on this sheet is based on data supplied by the manufacturer to IKO and believed to be true and accurate. The information is offered solely for the user's consideration, investigation and verification. Nothing contained herein constitutes or represents a warranty or guarantee for which the manufacturer or the distributor can be held legally responsible.