


NOTES:

1. Only use a Field Fabricated flashing when an InnoviFlash TPO Universal or Split Pipe Boot cannot be used.
2. For Mechanically Attached Systems, install min. four (4) InnoviFast TPO Seam Plates and Fasteners to secure the roof membrane at the base of the pipe, max. 12.0" from center of penetration. Cover plates with InnoviFlash 10" TPO Cover Tape or adhere a target patch of IKO Innovi TPO Membrane using appropriate InnoviBond Membrane Adhesive, and seal the edges with a continuous bead of InnoviSeal TPO Edge Sealant.
*NOTES CONTINUE BELOW...

WARRANTY NOTE: THIS DETAIL IS ACCEPTABLE FOR UP TO 20 YEAR WARRANTIES ONLY. PRE-FABRICATED/PRE-MOLDED FLASHINGS MUST USED FOR 25-30 YEAR WARRANTIES.

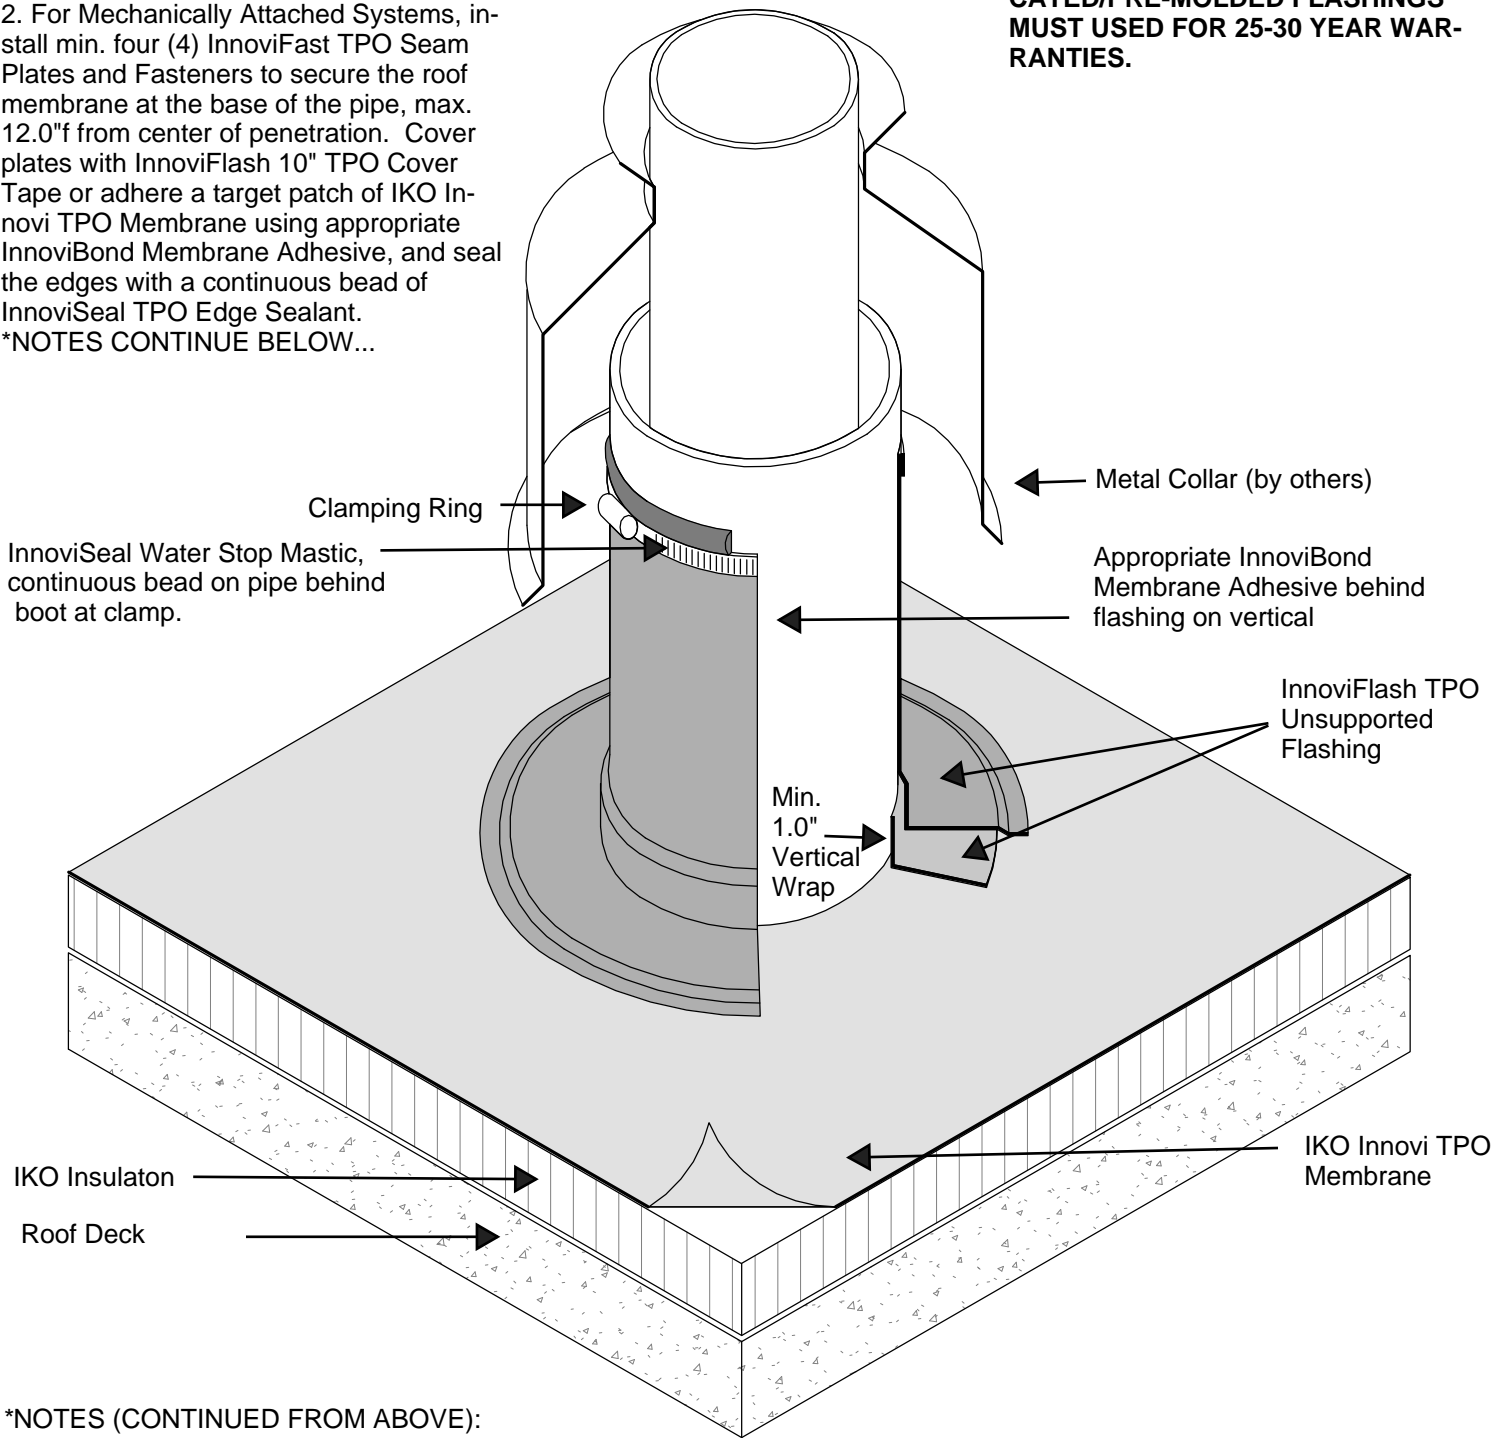

***NOTES (CONTINUED FROM ABOVE):**

3. Add a continuous bead of InnoviSeal Water Stop Mastic on pipe behind boot at clamp location.
4. If installing boot over a membrane seam, flash intersections of boot perimeter and membrane seam with InnoviFlash TPO Joint Covers.

HOT PIPE - FIELD-FABRICATED PIPE WRAP

PF-4