



STEP ONE

CUT A MINIMUM 6" X 6" (150mm X 150mm) PIECE OF APPROPRIATE TPO UNSUPPORTED FLASHING WITH ROUNDED CORNERS

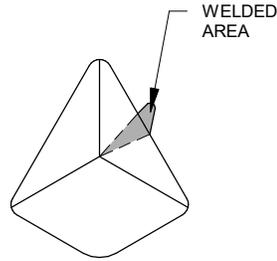


STEP FOUR

UNFOLDED VIEW OF CORNER AFTER WELD. ENSURE WELD IS COMPLETE

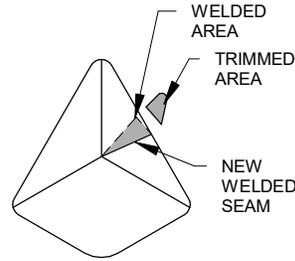


STEP FIVE

TRIM WELDED FLAP AS SHOWN PAST THE NEWLY WELDED LAP

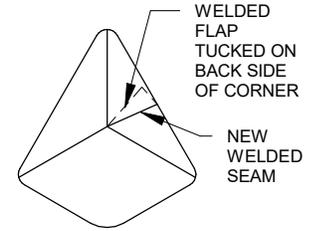


STEP SIX

EXPAND PIECE TO FIT PROPERLY INTO CORNER AND WELD INTO PLACE

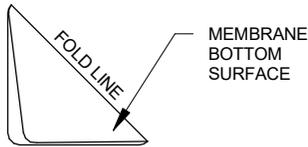


STEP TWO

FOLD PIECE IN HALF

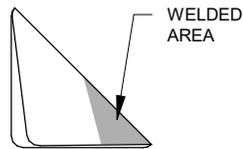

STEP THREE

HAND WELD 1/4 OF FOLDED AREA AS SHOWN

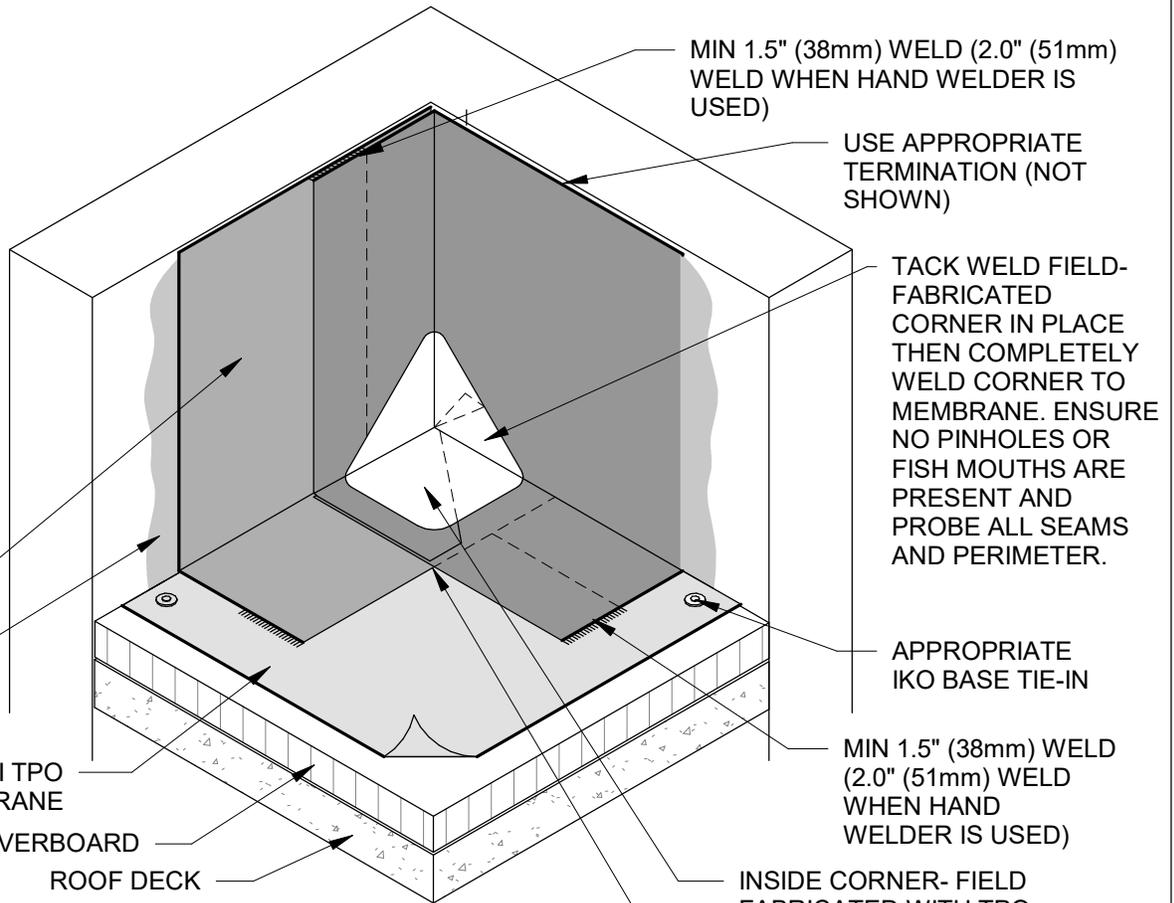

NOTES:

1. REFER TO IKO.COM/COMM FOR THE MOST UP TO DATE INSTALLATION INFORMATION
2. PRE-MOLDED TPO UNIVERSAL CORNER MAY BE USED IN PLACE OF INNOVIFLASH UNSUPPORTED FLASHING.
3. TAKE CARE NOT TO OVERSTRETCH THE INNOVIFLASH UNSUPPORTED FLASHING DURING INSTALLATION. ADDITIONAL FLASHING MATERIALS MAY BE REQUIRED IF UNSUPPORTED FLASHING IS IMPROPERLY INSTALLED.
4. IKO INNOVISEAL TPO EDGE SEALANT IS REQUIRED ON ALL CUT OR NON-ENCAPSULATED EDGES OF REINFORCED MEMBRANE. THIS INCLUDES FACTORY CUT EDGES.

<p>Title: INSIDE CORNER- FIELD FABRICATED WITH TPO UNSUPPORTED FLASHING</p>	<p>Detail Number: T-C-3</p>
--	------------------------------------

<p>Issue Date: 8/01/2025</p>	<p>Maximum Warranty Term: 20-Years</p>	<p>Not to Scale</p>
------------------------------	--	---------------------