


NOTES:

1. REFER TO IKO.COM/COMM FOR THE MOST UP TO DATE INSTALLATION INFORMATION.
2. ANY CARPENTRY OR METAL WORK SHOULD BE DESIGNED AND CONSTRUCTED IN ACCORDANCE WITH LOCAL CODE REQUIREMENTS AND/OR PROJECT SPECIFICATIONS. THESE COMPONENTS SHOULD BE REVIEWED AND APPROVED BY A LICENSED DESIGN PROFESSIONAL. IKO ASSUMES NO RESPONSIBILITY FOR THE INSTALLATION OF THE ASSOCIATED COMPONENTS OR DAMAGE TO THE ROOF SYSTEM DUE TO FAULTY INSTALLATION.
3. FOR MECHANICALLY ATTACHED SYSTEMS, INSTALL A MINIMUM OF FOUR (4) INNOVIFAST FASTENERS AND SEAM PLATES TO SECURE THE ROOFING MEMBRANE AT THE BASE OF THE PIPE. IF SUFFICIENT SPACE IS NOT AVAILABLE TO INSTALL THE FASTENERS AND PLATES UNDER THE CONE OF THE BOOT, A 24" X 24" TARGET PATCH OF IKO INNOVI TPO MUST FIRST BE INSTALLED. SEE DETAIL T-P-7 OR T-P-8.
4. HEAT WELD THE BASE OF THE SPLIT PIPE BOOT TO THE FIELD MEMBRANE OR TARGET PATCH. A MINIMUM 2.0" WELD IS REQUIRED.
5. IF INSTALLING OVER A MEMBRANE SEAM, FLASH INTERSECTIONS OF THE BOOT PERIMETER AND MEMBRANE WITH INNOVIFLASH TPO JOINT COVERS.

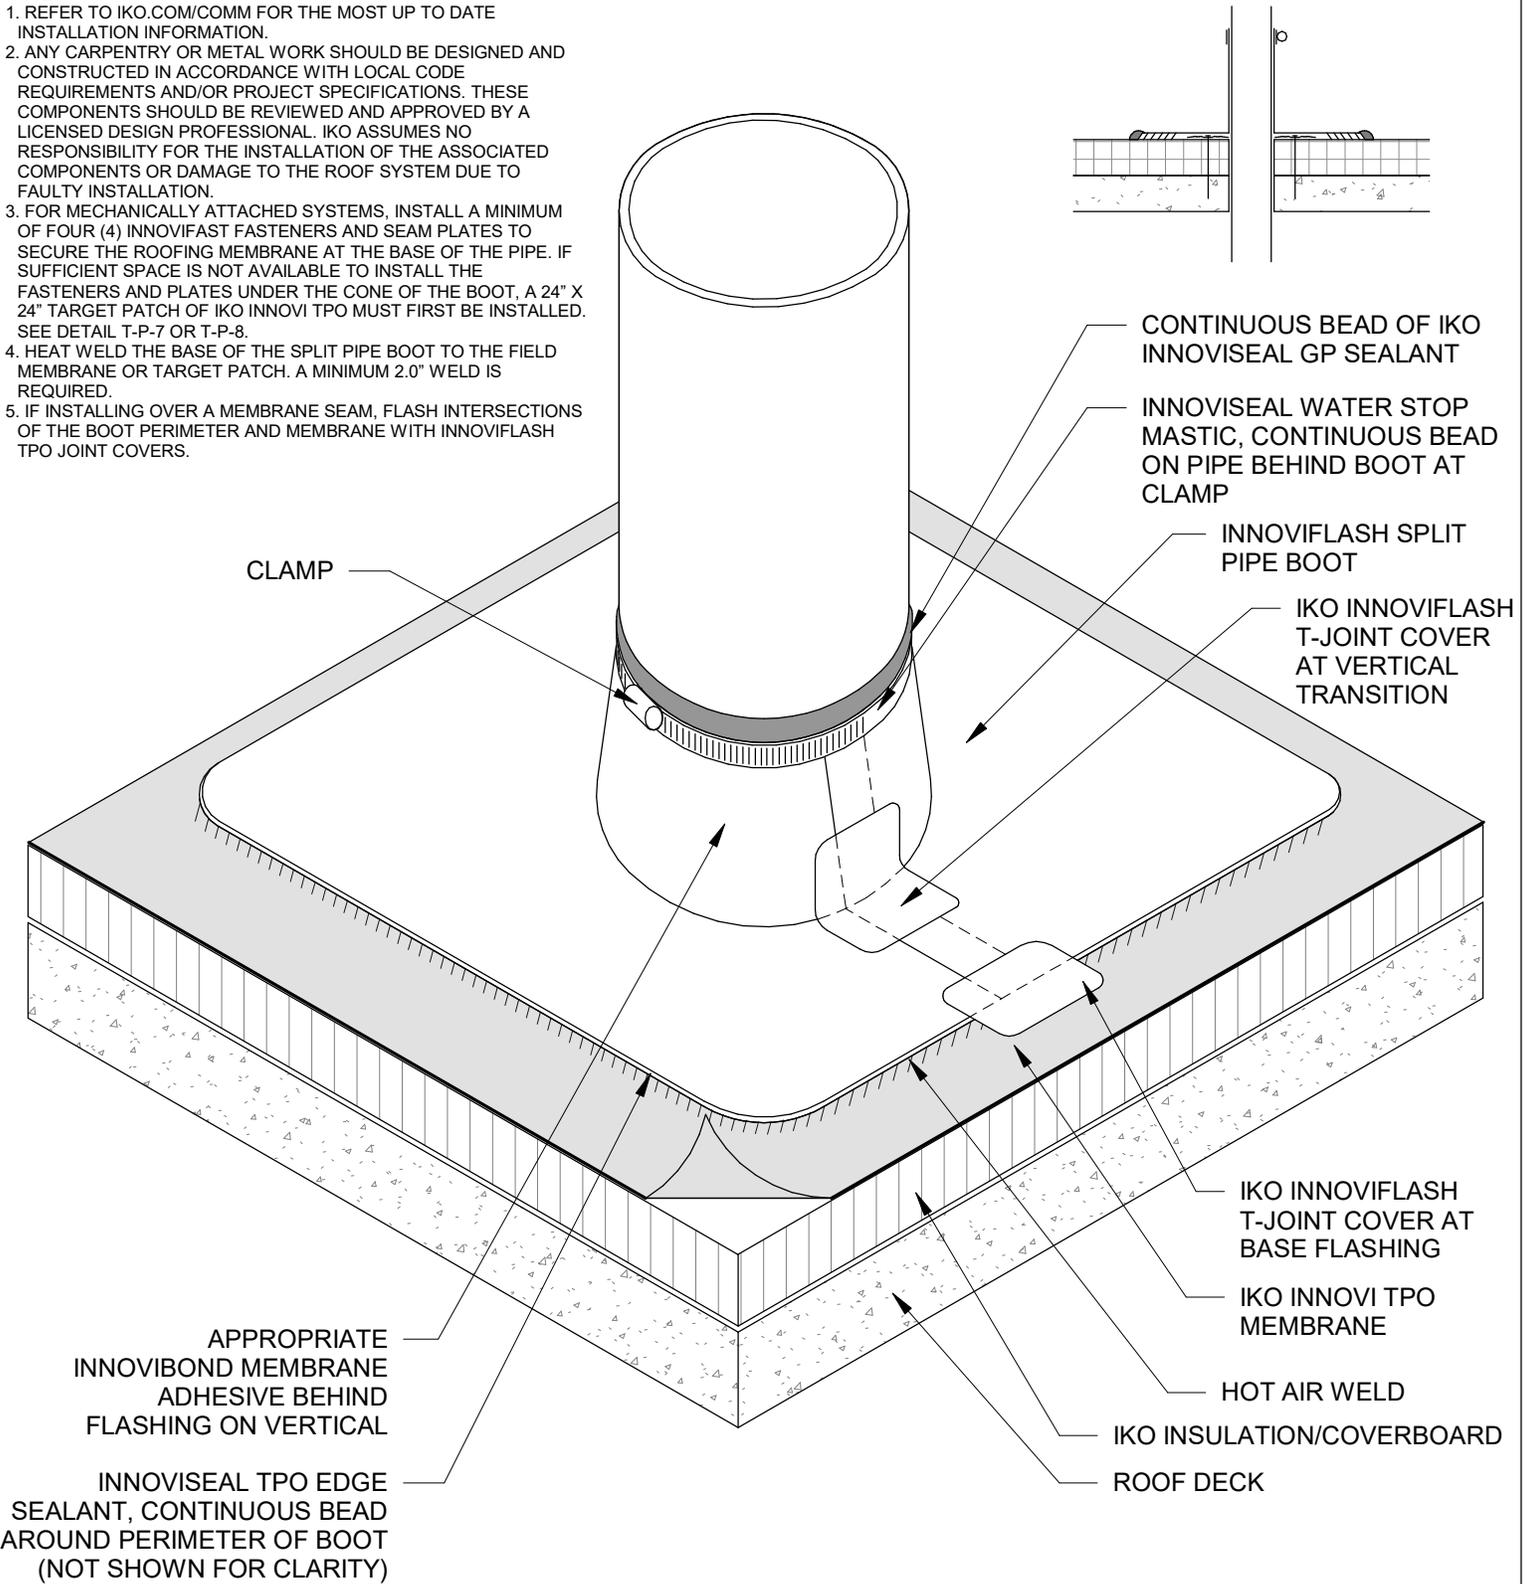

Title: SPLIT PIPE BOOT

Detail Number: T-P-2

Issue Date: 8/01/2025

Maximum Warranty Term: 30-years

Not to Scale



COMMERCIAL

Specify with Confidence.

