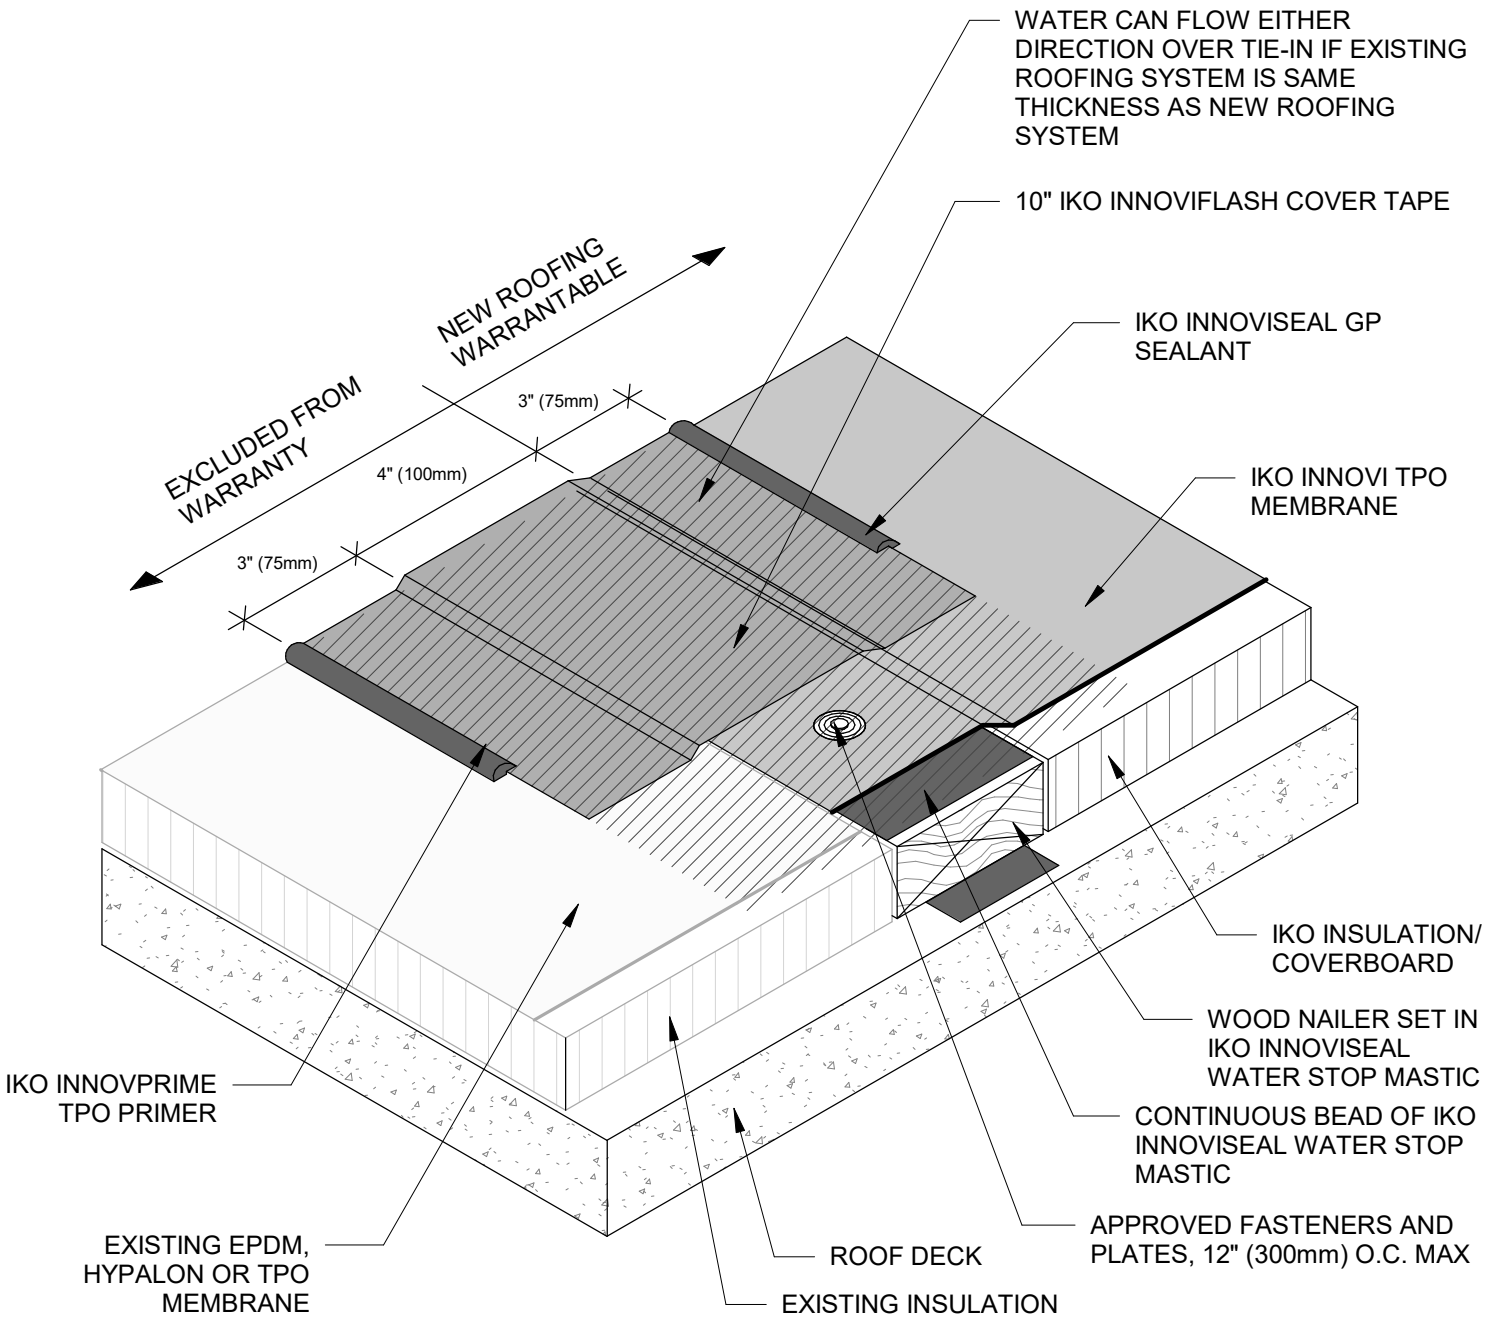

NOTE:
1. REFER TO IKO.COM/COMM FOR THE MOST UP TO DATE INSTALLATION INFORMATION.
2. ANY CARPENTRY OR METAL WORK SHOULD BE DESIGNED AND CONSTRUCTED IN ACCORDANCE WITH LOCAL CODE REQUIREMENTS AND/OR PROJECT SPECIFICATIONS. THESE COMPONENTS SHOULD BE REVIEWED AND APPROVED BY A LICENSED DESIGN PROFESSIONAL. IKO ASSUMES NO RESPONSIBILITY FOR THE INSTALLATION OF THE ASSOCIATED COMPONENTS OR DAMAGE TO THE ROOF SYSTEM DUE TO FAULTY INSTALLATION
3. REFER TO EXISTING ROOFING MANUFACTURERS' SPECIFICATIONS FOR SURFACE PREPARATION PROCEDURES.
4. IKO INNOVIPRIME TPO PRIMER MUST BE USED TO PREPARE THE MEMBRANE PRIOR TO APPLYING IKO INNOVIFLASH COVER TAPE.

Title: TIE-IN TO EXISTING EPDM	Detail Number: T-ST-1
Issue Date: 8/01/2025	Maximum Warranty Term:
Not to Scale	

IKO COMMERCIAL
Specify with Confidence.

INNOVI TPO